





Place your wheel on the main plate and drive four bolts to fix it firmly.

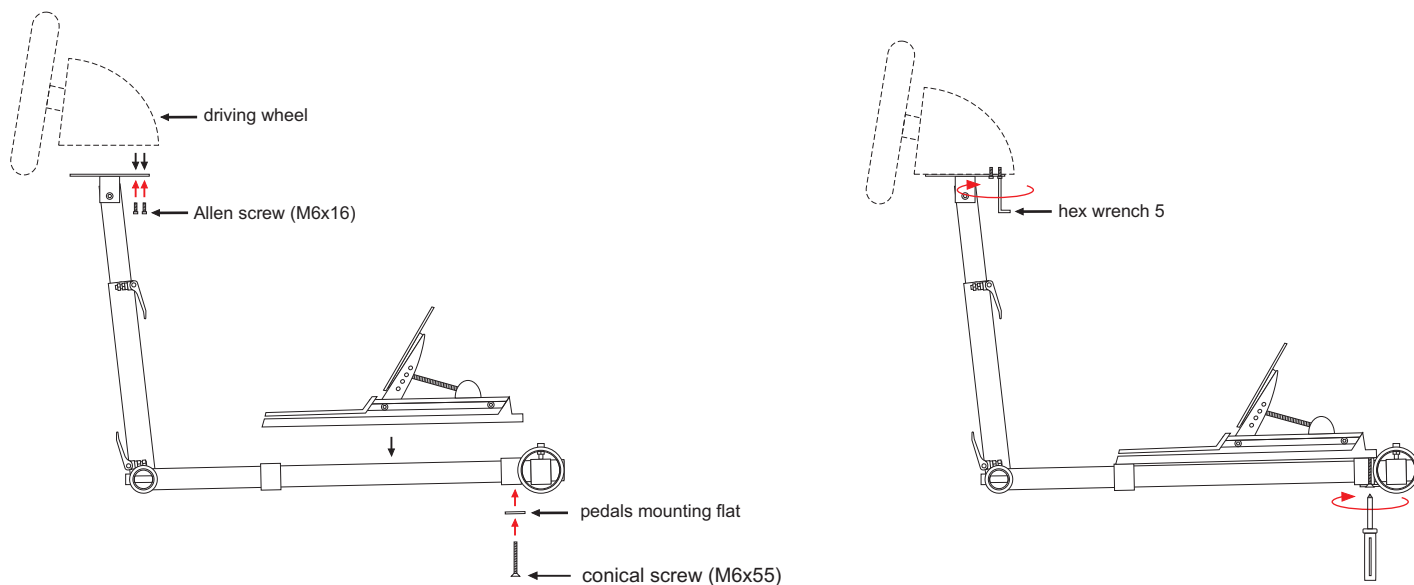

Place your CSR pedals on the stand.

Next drive 2 conical screws (M6x55) to connect the pedals with the pedals mounting flat from the bottom.

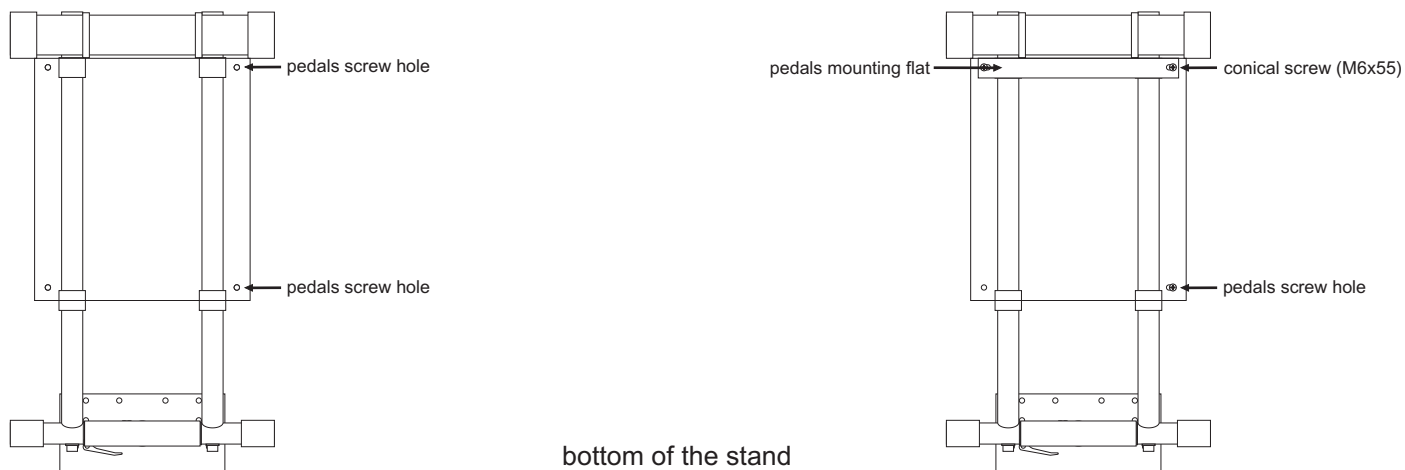

PLEASE ALSO SEE CONSTRUCTOR'S TIPS: <http://www.wheelstandpro.com/contips.html>

Tightening the screws too firmly can cause damage to the wheel and pedals.

For details please visit our website:

www.wheelstandpro.com

