
wheel stand pro

Please visit our YouTube channel for all the set up videos at: http://www.youtube.com/user/wheelstandpro or scan the QR code


Place your pedals on the base of the stand and drive 4 conical screws (M5x60) with 4 threaded bushings M5x10 with hands only to fix it firmly.

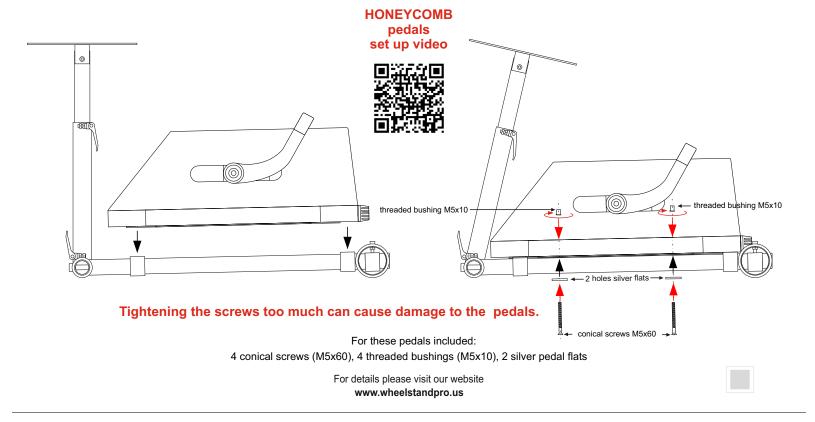



Please visit our YouTube channel for all the set up videos at: http://www.youtube.com/user/wheelstandpro or scan the QR code

Place your pedals on the base of the stand and drive 4 conical screws (M5x60) with 4 threaded bushings M5x10 with hands only to fix it firmly.

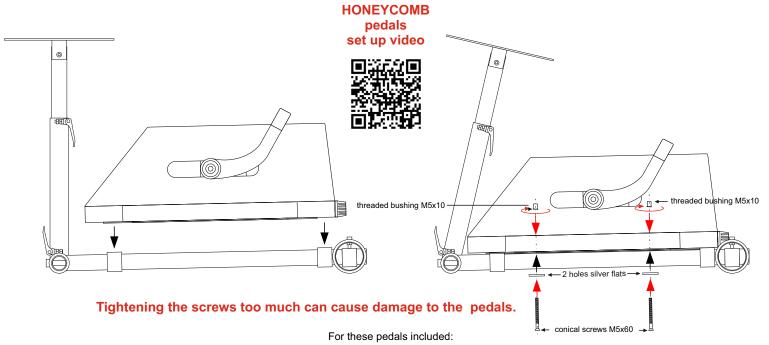

4 conical screws (M5x60), 4 threaded bushings (M5x10), 2 silver pedal flats

For details please visit our website www.wheelstandpro.us