

Please visit our YouTube chanel for all the set up videos at: http://www.youtube.com/user/wheelstandpro


## Thrustmaster (F458, T80, T100, SPIDER, RGT, F. GT EXPERIENCE) adapter holes Spring washer 10 Allen bolt M10x16 (drive gradually with Allen wrench 8) Allen wrench 8

## Hori wheels are mounted with 1 Allen screw M10x16.

Thrustmaster F430, TX, T300RS mounting holes

Thrustmaster F430, TX, T300RS, wheels are mounted with 2 Allen screws M6x16 only.

Tightening the screws too much can cause damage to the wheel and pedals.

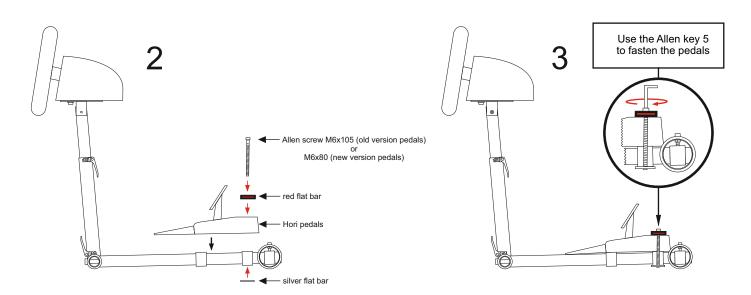

## PLEASE ALSO VISIT CONSTRUCTOR'S TIPS: http://www.wheelstandpro.com/contips.html

www.wheelstandpro.com